


new VOMs
from

Simpson

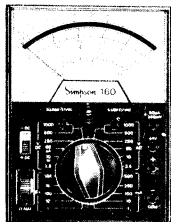

160 Handi-VOM


Just 3 3/8" Wide . . .
with Full-Size VOM Features

- 20,000 Ω VDC . . . 5,000 Ω VAC
- \pm 2% DC . . . \pm 3% AC
- 5 Resistance Ranges . . . Plus a true DC Millivolt Range

314 Solid-State VOM

VTVM Features . . . VOM Conveniences

- 10mVAC, 50mVDC ranges
- Low power and conventional ohms
- Frequency compensated, 100 Meg Ω probe
- Large 7" scale
- Battery Operated

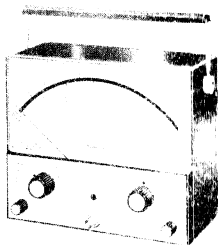

Write for Catalog 4300

Simpson has over 1,400 stock
sizes and types of panel instruments, too!



Write for Catalog 4300

OPERATOR'S MANUAL

Courtesy of :
Simpson260.com

MODEL 294 AMP-CLAMP® AMMETER

MODEL 295 AMP-CLAMP®

VOLT-AMMETER

MODEL 296 AMP-CLAMP®

VOLT-OHM-AMMETER

SIMPSON ELECTRIC COMPANY

853 Dundee Ave., Elgin, Illinois 60120

Area Code 312, Telephone 695-1121

In Canada, Bach-Simpson, Ltd., London, Ontario

Printed in U.S.A.
8-74

Part No. 5-116868



Figure 1-1. Simpson Amp-Clamp

TABLE OF CONTENTS

SECTION I

Introduction	1-1
1.1 General	1-1
1.2 Accessories and Supplies	1-2
1.3 Technical Data	1-2

SECTION II

Installation	2-1
2.1 Unpacking and Inspection	2-1
2.2 Power Requirements	2-2
2.3 Installation	2-2

SECTION III

Controls, Connectors and Indicator	3-1
3.1 General	3-1
3.2 Description	3-1

SECTION IV

Operation	4-1
4.1 General	4-1
4.2 Safety Precautions	4-1
4.3 AC Current Measurements	4-3
4.4 AC Voltage Measurements	4-4
4.5 Resistance Measurements	4-5
4.6 Application Information	4-6

SECTION V

Theory of Operation	5-1
5.1 AC Current Measurements	5-1
5.2 AC Voltage Measurements	5-1
5.3 Resistance Measurements	5-2

SECTION VI

Maintenance	6-1
6.1 General	6-1
6.2 Warranty	6-1
6.3 Care	6-2
6.4 Battery Installation	6-2
6.5 Battery Removal	6-4
6.6 Fuse	6-4

SECTION VII

Ordering Information, Schematic Diagram and Authorized Service Centers	7-1
---	-----

LIST OF TABLES

1-1 Technical Data	1-3
3-1 Controls, Connectors and Indicator ...	3-1
7-1 Items Included With Instruments	7-1
7-2 Accessories Available	7-1
7-3 Replacement Parts List, Model 294 ...	7-5
7-4 Replacement Parts List, Model 295 ...	7-6
7-5 Replacement Parts List, Model 296 ...	7-7

LIST OF ILLUSTRATIONS

1-1 Simpson Amp-Clamp	ii
3-1 Controls, Connectors and Indicator ...	3-2
4-1 Increasing Sensitivity of Amp-Clamp	4-8
6-1 Battery Installation and Fuse Location (Model 296 Only)	6-3
7-1 Model 294, Schematic Diagram	7-2
7-2 Model 295, Schematic Diagram	7-3
7-3 Model 296, Schematic Diagram	7-4

WARNING

The Models 294, 295, and 296 are designed to prevent accidental shock to the operator when properly used. However, no engineering design can render safe an instrument which is used carelessly. Therefore, this manual must be read carefully and completely prior to making any measurements. Failure to follow directions can result in a serious or fatal accident.

SHOCK HAZARD: As defined in American National Standard, C39.5, Safety Requirements for Electrical & Electronic Measuring & Controlling Instrumentation, a shock hazard shall be considered to exist at any part involving a potential in excess of 42.4 volts peak (DC, AC peak or DC plus AC peak), or where a leakage current from that part to ground exceeds 0.5 milliampere, when measured with an appropriate measuring instrument defined in Section 11.6.1 of ANSI C39.5.

(NOTE: The proper measuring instrument for measurement of leakage current consists essentially of a network of a 1500 ohm non-inductive resistor shunted by a 0.15 microfarad capacitor connected between the terminals of the measuring instrument. The leakage current is that portion of the current that flows through the resistor. The Simpson Model 229-Series 2 AC Leakage Current Tester
vi

meets the ANSI C39.5 requirements for the measurement of AC leakage current and can be used for this purpose. To measure DC leakage current, connect a 1500 ohm non-inductive resistor in series with a Simpson 0-500 DC microammeter and use this as the measuring instrument.)

SECTION I INTRODUCTION

1.1 GENERAL

1.1.1 The Simpson Amp-Clamp Models 294, 295 and 296 (hereafter referred to as Model 294, 295 and 296 Amp-Clamp, or simply the Instrument) are rugged Instruments designed for general purpose testing.

1.1.2 The Models 294, 295 and 296 are analog readout Instruments designed with a self-shielded core type movement and protected from overload by a varistor. These Instruments also feature a finger-operated lever which clamps the pointer at the reading being made, thus providing a capability to take measurements without looking at the indicator, and then later observing the indicated value. With the Amp-Clamp, current measurements are made without disconnecting or breaking into the line being checked. By clamping the Amp-Clamp

Introduction

jaws around one of the current-carrying lines, quick and accurate measurement can be obtained. The jaws are shaped to allow easy insertion into crowded wire assemblies.

1.1.3 The Model 294 measures AC current with 3% accuracy. The Model 295 measures both AC current and AC voltage with 3% accuracy, the voltage measurements being made with test leads supplied with each instrument. The Model 296 measures AC current, AC voltage and resistance with 3% accuracy. A self-contained 1.5 volt AAA size alkaline battery supplies the power for resistance measurements. The resistance circuit is protected by a 1/4 ampere fuse, and a spare fuse is provided. Both battery and fuses are readily accessible under the cover plate on the bottom of the Instrument.

1.2 ACCESSORIES AND SUPPLIES

All items required for operation of the Instrument are furnished with the Instrument (refer to Table 7-1).

1.3 TECHNICAL DATA

Table 1-1 lists the technical specifications for the Simpson Amp-Clamp Instruments.

Introduction

Table 1-1. Technical Data

1. AC Current, Models 294, 295 and 296

Ranges:	0-6, 15, 30, 150 and 300 RMS Amperes
Accuracy:	±3% of full-scale at 60 Hz sine wave with conductor centered.
Temperature Error:	Less than 1% of full scale between 15°C to 35°C

2. AC Voltage, Models 295 & 296

Ranges:	0-30, 150, 300 and 600 RMS Volts
Accuracy:	±3% of full-scale at 60 Hz Sine Wave
Temperature Error:	0.5% of full-scale max. between 15°C to 35°C

3. Resistance, Model 296

Range:	0-500 ohms (25 ohm center)
Accuracy:	±3% of Arc

4. Rated Circuit-To-Ground Voltage*

600V RMS Max. (850V peak)

5. Weight:

14 oz. (.40 kg)

6. Dimensions:

10" long x 2.7" wide x 1.4" high (254 x 65.6 x 35.6 mm)

* NOTE, per American National Standard, C39.5 (April 1974), Safety Requirements for Electrical & Electronic Measuring & Controlling Instrumentation, RATED CIRCUIT-TO-GROUND VOLTAGE is defined to mean: "The specified voltage with respect to ground which may be safely and continuously applied to the circuits of an instrument."

SECTION II

INSTALLATION

2.1 UNPACKING AND INSPECTION

2.1.1 Examine the shipping carton for obvious signs of damage prior to unpacking. If shipping carton is in good condition, then unpack and inspect the Instrument for possible damage incurred during shipment. Also, check that all items are included (see Table 7-1). If damage is noted, notify the carrier and supplier and do not attempt further use of the Instrument. If Instrument appears to be in good condition, read Operator's Manual in its entirety. Become familiar with the Instrument as instructed in the manual, then proceed to check the electrical performance as soon as possible.

2.1.2 Save the shipping carton and packaging materials for future storing or shipping of the Instrument.

Installation

2.2 POWER REQUIREMENTS

2.2.1 The Models 294 and 295 Amp-Clamp's do not require the use of batteries or an external power source.

2.2.2 The Model 296 requires the use of a battery for powering the resistance measuring circuit. One 1.5 volt AAA alkaline (NEDA No. 24A) cell is used. Refer to paragraph 6.4 for battery installation.

2.3 INSTALLATION

These Instruments can be used in any position convenient to the operator.

SECTION III CONTROLS, CONNECTORS AND INDICATORS

3.1 GENERAL

This section describes all operating controls, connectors and the indicator of the Amp-Clamp, Models 294, 295 and 296. Become familiar with each item of a particular model prior to operating the Instrument.

3.2 DESCRIPTION

Table 3-1 lists all controls, connectors and the indicator. See Figure 3-1 for identification.

Table 3-1. Controls, Connectors and Indicator

1. Range Selector Switch

Switch Position

6A, 15A, 30A, 60A,
150A, 300A

(Models 294, 295,
& 296)

30V, 150V, 300V,
600V (Models 295
& 296)

OHMS (Model 296)

Selects the desired range setting for AC current. Measurements are made by clamping jaws around a single current carrying conductor.

Selects desired range setting for AC volts. Voltage is measured with test leads (supplied).

Selects circuit required for resistance measurements. The resistance is measured with test leads (supplied).

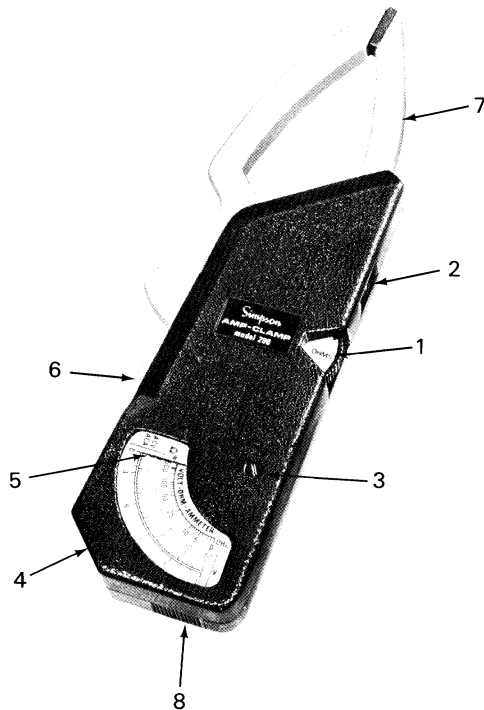


Figure 3-1. Controls, Connectors and Indicator

Controls, Connectors, and Indicators

- | | |
|--|--|
| 2. Ohms Adjust
(Model 296) | This control zero adjusts the Instrument with test leads shorted together. |
| 3. Pointer Zero Adjust | This control adjusts the pointer to coincide with the zero point on the dial with no input signal. |
| 4. Terminals
(Models 295 & 296) | The terminals are the input for the voltage and resistance measurements, and have no polarity or ground reference. |
| 5. Pointer | The pointer indicates the value of the measured parameter (amperes, volts, resistance). |
| 6. Pointer Lock Lever | When lifted toward the front of the Instrument, the lever locks the pointer to the dial. The pointer is released when the lever is set to the rear position. |
| 7. Clamp Jaws | Used for making AC current measurements. The spring loaded jaws are clamped around a single current carrying conductor. |
| 8. Battery & Fuse
(Model 296)
Compartment Cover | This cover provides access to the battery and fuse compartment. A spare fuse is also provided inside the compartment. |

SECTION IV

OPERATION

4.1 GENERAL

4.1.1 This section of the manual contains all the information required to use and operate the Amp-Clamp in a safe and proper manner. Special notes and instructions have also been provided for added user safety and convenience.

4.2 SAFETY PRECAUTIONS

4.2.1 The Amp-Clamp is designed to be used only by personnel qualified to recognize shock hazards and trained in the safety precautions required to avoid possible injury. Refer to SHOCK HAZARD definition on page v.

4.2.2 Do not work alone when making measurements where a shock hazard can exist. Notify a nearby person that you are, or intend to make such measurements.

4.2.3 Voltages might appear unexpectedly in defective equipment. Whenever possible, remove all power from the circuit when making connections or disconnections.

4.2.4 Locate all voltage and current accessibility paths prior to making any measurement or connections of equipment under test.

Operation

4.2.5 For your own safety, inspect the Instrument and test leads for cracks, breaks or crazes in the insulation and replace the defective item(s) immediately.

4.2.6 Do not make measurements in a circuit where corona is present. Corona can be identified by a pale-blue color emanating from sharp metal points in the circuit, or by a buzzing sound, or by the odor of ozone. In rare instances, such as around germicidal lamps, ozone might be generated as a normal function. Ordinarily the presence of ozone indicates presence of high voltage, and possibly an electrical malfunction of some kind.

4.2.7 Hands, shoes, floor and workbench must be dry. Avoid making measurements under humid, damp or other environmental conditions that could effect the dielectric withstanding voltage of the test leads of the Instrument.

4.2.8 Do not use test leads which differ from those originally furnished with the Instrument. When using the insulated alligator clip leads for voltage measurement (Models 295 and 296) be sure the insulator boot covers all exposed metal at the connection.

Operation

4.2.9 Do not connect this Instrument to any circuit in which the voltage, with respect to ground, exceeds the rated circuit-to-ground voltage specified in Table I (Item 4).

4.3 AC CURRENT MEASUREMENTS, Models 294, 295 and 296

- a. **READ AND HEED THE WARNING IN PARAGRAPH 4.1.**
- b. Disconnect the test leads from the Instrument.
- c. Set the range selector switch to the appropriate ampere range. If the magnitude of the current being measured is unknown, start with the 300 ampere range.
- d. Clamp the jaws of the Amp-Clamp around one (only) of the current carrying wires to be measured. Make certain the jaws are completely closed.

NOTE: There will be no meter indication if the Amp-Clamp jaws are clamped around both conductors, as in a power cord, because the opposing magnetic fields will cancel each other.

- e. Reset the range selector switch, if necessary, to obtain pointer indication in the upper portion of the scale for maximum reading accuracy.

Operation

- f. Read the current value from the appropriate scale as indicated by the selector switch position.
- g. If the Amp-Clamp is in a position where the pointer position cannot be accurately seen, the pointer lock actuator can be flipped up with a finger. This will clamp the pointer to permit reading the indicated value after removing it from the wire.

4.4 AC VOLTAGE MEASUREMENTS, Models 295 and 296

- a. **READ AND HEED THE WARNING IN PARAGRAPH 4.1.**
- b. Connect the test leads to the Amp-Clamp input terminals and twist the connectors 1/8 turn to lock them in place.
- c. Set the range selector switch to the appropriate voltage range. If not known, start with the 600 volt range.
- d. If possible, remove all power and discharge any capacitors in the circuit to be measured. Test leads may be used to make connections. Make certain that the lead insulating boots cover the metal leads.

Operation

- e. If power cannot be removed, remove the clip from the red probe, connect the black test lead to the ground side of the circuit and use the red probe to contact the live side of the circuit. Keep hands away from live parts.
- f. Connect test leads to the circuit and apply power.
- g. Reset the range selector switch, if necessary, to obtain a pointer indication in the upper portion of the scale for maximum reading accuracy.
- h. Read the voltage value from the appropriate scale as indicated by the selector switch position.
- i. Remove power and discharge any capacitors before disconnecting test lead connections.

4.5 RESISTANCE MEASUREMENTS, Model 296

- a. **MAKE CERTAIN ALL POWER IS REMOVED AND ALL CAPACITORS IN THE CIRCUIT ARE DISCHARGED BEFORE IN-CIRCUIT RESISTANCE MEASUREMENTS ARE TO BE MADE.**
- b. Connect the test leads to the Amp-Clamp input terminals and twist the connectors 1/8 turn to lock them in place.

Operation

- c. Set selector switch to OHMS position.
- d. Short the leads and adjust ohms adjust knob for zero ohms indication. (If there is no pointer deflection, check fuse. If pointer deflects but cannot be adjusted to zero ohms, replace battery.)
- e. Connect test leads across resistance being measured. Read resistance on OHMS scale of meter.

4.6 APPLICATION INFORMATION

4.6.1 Current Measurements, Models 294, 295 & 296

- a. The Amp-Clamp is a practical and valuable electrical testing tool. It is largely used for tracing faults, diagnosing operating troubles and checking and/or balancing distribution circuits without initially turning the power off to install an ammeter. It can be used to measure the running current of electric motors without the problem of by-passing the heavy starting current.
- b. Because current can only be measured thru a single conductor, a useful accessory, Simpson Model 151 Line Splitter (Catalog No. 00534),

Operation

can be used with the Amp-Clamp in checking equipment where the conductors are encased in a single cord, or cannot be isolated.

4.6.2 Sensitivity Increase

- a. The Model 151 Line Splitter also provides a convenient means of increasing the sensitivity of the Amp-Clamp by a factor of 10.
- b. As stated in Section V, the Amp-Clamp functions as a split-core transformer. Other multiples of increased sensitivity can be obtained by winding turns around one of the jaws of the Amp-Clamp, as shown in Figure 4-1.
- c. If ten turns are wound on the jaw, and the range selector is set on the 6 amp range, then a current of 600 milliamperes in the current carrying AC line will read full scale on the Indicator. Divide the reading on the scale by 10 to obtain the actual current.

4.6.3 Voltage Measurements, Models 295 & 296

The voltage ranges on the Amp-Clamp were selected so that the line voltages of 120, 240, and 480 volts could be accurately determined. The 30 volt range is useful in checking thermostat circuits in heating and air-conditioning applications.

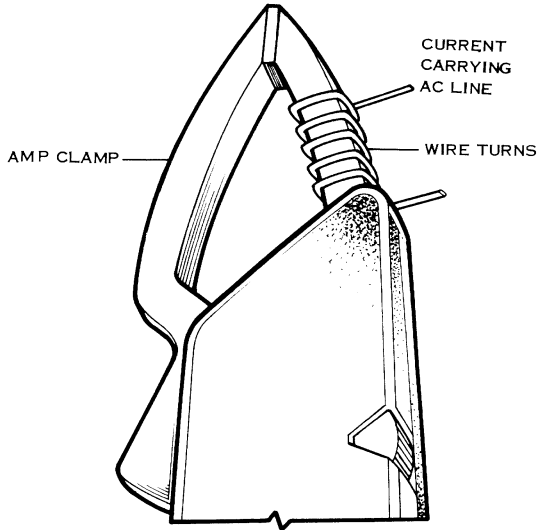


Figure 4-1. Increasing Sensitivity of Amp-Clamp

4.6.4 Resistance Measurements, Model 296

- a. The resistance range can be used to accurately measure low values of resistance between zero and 500 ohms. This ohmmeter feature is also useful as a continuity tester for checking motor windings, fuses, switches, etc.
- b. The resistance range can be used to check a capacitor for a serious fault. When connected, the capacitor's charging current will cause a momentary deflection toward zero ohms and a slow return to infinity as the capacitor charges. The amount of deflection and time to return to infinity are proportional to the capacitance. Small capacitances will produce a deflection so small as to be difficult to observe. A faulty capacitor will, however, indicate a fixed resistance value (shorted) or will not produce a momentary deflection of the meter (open). Once charged, the capacitor cannot be rechecked until first discharged.
- c. The resistance range may be used to check semiconductors for open or shorted junctions.

SECTION V

Theory of Operation

THEORY OF OPERATION

5.1 AC CURRENT MEASUREMENTS

The Amp-Clamp, in effect, functions as a split core transformer to measure current in a conductor under test. The current-carrying conductor acts as a transformer primary, and a coil on the clamp core serves as the secondary. The magnetic field that surrounds the current carrying conductor induces a voltage, which is proportional to the current, into the secondary coil. This voltage is rectified and applied to the indicating circuit.

5.2 AC VOLTAGE MEASUREMENTS

Measured voltages are reduced in value by series dropping resistors, then rectified and applied to the indicating circuit.

5.3 RESISTANCE MEASUREMENTS

5.3.1 The unknown resistance is placed in series with the battery and the Amp-Clamp indicator circuit. The indicating circuit consists of a meter shunted by a fixed resistor. When zero resistance is being measured, or input leads are shorted, maximum current flows in the circuit and the Amp-Clamp indicates a full scale deflection of zero ohms. When the unknown resistance is equal to the fixed shunt resistor, the Amp-Clamp indicates 1/2 full scale deflection. Thus, the value of the resistance being measured controls the amount of current in the indicating circuit.

MAINTENANCE**6.1 GENERAL**

The Amp-Clamp has been carefully designed using high-quality components. With reasonable care, and following the instructions in this manual, a long useful service life can be expected from this Instrument.

6.2 WARRANTY

The Simpson Electric Company warranty policy is printed on the inside back cover of the manual. Read it carefully prior to requesting a warranty repair.

NOTE: For assistance of any kind, including help with the Instrument under warranty, contact your nearest Simpson Authorized Service Center for instructions. These centers are listed on the last pages of this manual. If you wish to contact the factory directly, give full details of the difficulty and include the Instrument model number and date of purchase. Service data or shipping instructions will be promptly sent to you. If an estimate of charges for non-warranty or other service work is required, a maximum charge estimate will be quoted. This charge will not be exceeded without prior approval.

6.3 CARE

6.3.1 Immediately remove any materials spilled on the Amp-Clamp. Use only a mild detergent in water or alcohol (wood grain, isopropyl or denatured) solvent. Other solvents may damage the plastic and/or reduce the effectiveness of the insulation. Dry the Instrument thoroughly before using it.

6.3.2 Magnetic joint surfaces at the jaw locking area should be maintained clean from residues of wire insulation or any other particles and free from dust and dirt. Also, by keeping the jaws completely closed, the reluctance of the magnetic core is held to a minimum thereby assuring full accurate current readings.

6.4 BATTERY INSTALLATION (Model 296 only)

Proceed as follows (see Figure 6-1):

- a. Remove battery and fuse compartment cover located at the bottom of the case, by pressing cover in at the serrated end and sliding it toward the terminal side of the case. This exposes the contact spring and the protective and spare fuses.
- b. Remove the contact spring from the compartment.

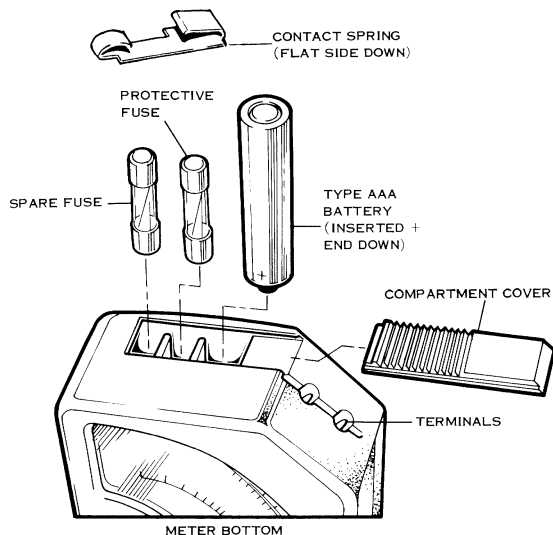


Figure 6-1. Battery Installation and Fuse Location (Model 296 Only)

- c. Install the battery, making sure that the positive (+) end is inserted into the bottom of the compartment.
- d. Re-insert the contact spring (flat side down), with the wide end over the battery.
- e. To replace the compartment cover, slide the serrated end in first.

6.5 BATTERY REMOVAL

Remove the battery from the Amp-Clamp when it is to be stored for long periods of time or when the battery is run-down. The condition of the battery is checked by setting Range Selector to OHMS, connecting the Instrument leads to terminal and shorting leads together. Inability to adjust pointer to zero indicates a weak battery. Refer to Figure 6-1 for battery location.

6.6 FUSE

The fuse is "in" the circuit during resistance measuring, and "out" of the circuit during current or voltage measurements. The active fuse is next to the battery compartment, while the spare fuse is in the outer compartment. Replace the fuse (following instructions in paragraph 6.4), with a 1/4 amp, type 8AG fuse.

SECTION VII

ORDERING INFORMATION, SCHEMATIC DIAGRAM AND AUTHORIZED SERVICE CENTERS

Table 7-1. Items Included With Instruments

Model 294		
Operator's Manual		5-116868
Model 295		
Test Lead, Red		10-830442
Test Lead, Black		10-830441
Operator's Manual		5-116868
Model 296		
Test Lead, Red		10-830442
Test Lead, Black		10-830441
Battery, 1.5V AAA Alkaline	NEDA #24A	
(2) Fuse, 1/4 Ampere Type 8AG		5-113997
Operator's Manual		5-116868

Table 7-2. Accessories Available

Description	Part No.
Carrying Case, Black Vinyl	02226
Line Splitter, Model 151	00534

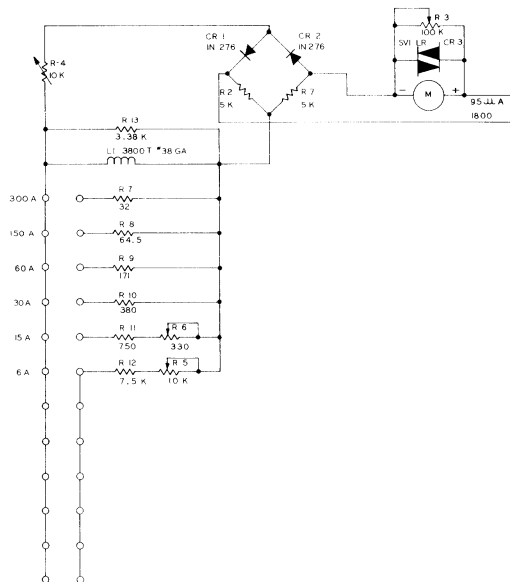


Figure 7-1. Model 294, Schematic Diagram

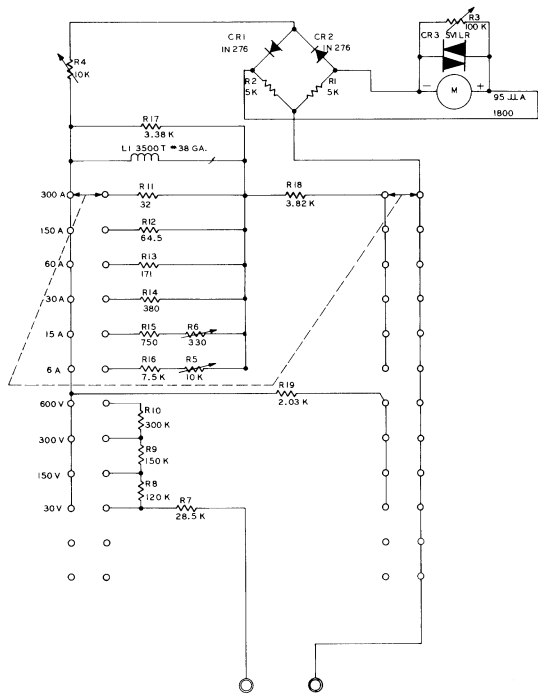


Figure 7-2. Model 295, Schematic Diagram

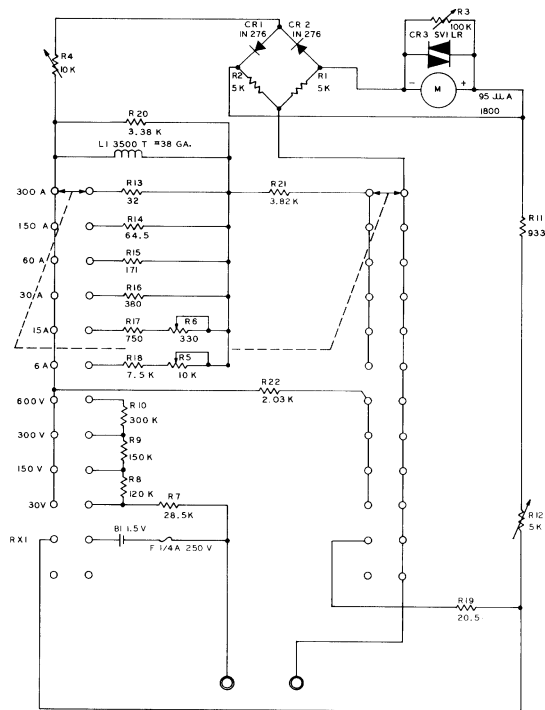


Figure 7-3. Model 296, Schematic Diagram

Table 7-3. Replacement Parts List, Model 294

Reference Symbol	Description	Part No.
CR1, CR2	Diode, 1N276	1-115970
CR3	Diode	1-110670
L1	Coil	5-112050
R1, R2	Resistor, 5 k Ω \pm 1%	5-116677
R3	Potentiometer, 100 k Ω	5-116664
R4, R5	Potentiometer, 10k Ω	5-116663
R6	Potentiometer, 330 k Ω	5-116662
R7	Resistor, 32 Ω \pm 1%	5-116809
R8	Resistor, 64.5 Ω \pm 1%	5-116669
R9	Resistor, 171 Ω \pm 1%	5-116670
R10	Resistor, 380 Ω \pm 1%	5-116671
R11	Resistor, 750 Ω \pm 1%	5-116672
R12	Resistor, 7.5k Ω \pm 1%	5-116678
R13	Resistor, 3.38k Ω \pm 1%	5-116675
	Housing Assembly, Top	10-862911
	Housing Assembly, Bottom	10-862905
	Actuator, Pointer Lock	5-116696
	Knob, Range Selector	3-260591
	Label, Range Selector	5-116814
	Ring, Retaining	5-112657
	Operator's Manual	5-116868

Table 7-4. Replacement Parts List, Model 295

Reference Symbol	Description	Part No.
CR1, CR2	Diode 1N276	1-115970
CR3	Diode	1-110670
L1	Coil	5-112050
R1, R2	Resistor, 5k Ω \pm 1%	5-116677
R3	Potentiometer, 100k Ω \pm 20%	5-116664
R4, R5	Potentiometer, 10k Ω \pm 20%	5-116663
R6	Potentiometer, 330k Ω \pm 20%	5-116662
R7	Resistor, 28.5k Ω \pm 1%	5-116679
R8	Resistor, 120k Ω \pm 1%	5-116680
R9	Resistor, 150k Ω \pm 1%	5-116681
R10	Resistor, 300k Ω \pm 1%	5-116808
R11	Resistor, 32 Ω \pm 1%	5-116809
R12	Resistor, 64.5 Ω \pm 1%	5-116669
R13	Resistor, 171 Ω \pm 1%	5-116670
R14	Resistor, 380 Ω \pm 1%	5-116671
R15	Resistor, 750 Ω \pm 1%	5-116672
R16	Resistor, 7.5k Ω \pm 1%	5-116678
R17	Resistor, 3.38k Ω \pm 1%	5-116675
R18	Resistor, 3.82k Ω \pm 1%	5-116676
R19	Resistor, 2.03k Ω \pm 1%	5-116674
	Test Lead, Red	10-830442
	Test Lead, Black	10-830441
	Alligator Clip (without insulator)	1-115963

Insulator Alligator Clip, Red	5-112479
Housing Assembly, Top	10-862912
Housing Assembly, Bottom	10-862905
Actuator, Pointer Lock	5-116696
Knob, Range Selector	3-260640
Label, Range Selector	5-116815
Operator's Manual	5-116868

R11	Resistor, 933k Ω \pm 1%	5-116673
R12	Potentiometer, 5k Ω \pm 20%	5-116634
R13	Resistor, 32 Ω \pm 1%	5-116809
R14	Resistor, 645 Ω \pm 1%	5-116669
R15	Resistor, 171 Ω \pm 1%	5-116670
R16	Resistor, 380 Ω \pm 1%	5-116671
R17	Resistor, 750 Ω \pm 1%	5-116672
R18	Resistor, 7.5k Ω \pm 1%	5-116678
R19	Resistor, 20.5 Ω \pm 1%	5-116667
R20	Resistor, 3.38k Ω \pm 1%	5-116675
R21	Resistor, 3.82k Ω \pm 1%	5-116676
R22	Resistor, 2.03k Ω \pm 1%	5-116674
	Battery Alkaline AAA	NEDA #24A

Table 7-5. Replacement Parts List, Model 296

Reference Symbol	Description	Part No.
CR1, CR2	Diode, 1N276	1-115970
CR3	Diode	1-110670
F1	Fuse, 1/4A, 8AG	5-113997
L1	Coil	5-112050
R1, R2	Resistor, 5k Ω \pm 1%	5-116677
R3	Potentiometer, 100k Ω \pm 20%	5-116664
R4, R5	Potentiometer, 10k Ω \pm 20%	5-116663
R6	Potentiometer, 330k Ω \pm 20%	5-116662
R7	Resistor, 28.5k Ω \pm 1%	5-116679
R8	Resistor, 120k Ω \pm 1%	5-116680
R9	Resistor, 150k Ω \pm 1%	5-116681
R10	Resistor, 300k Ω \pm 1%	5-116808

Test Lead, Red	10-830442
Test Lead, Black	10-830441
Alligator Clip	
(without Insulator)	1-115963
Insulator Alligator Clip, Red	5-112479
Housing Assembly, Top	10-862913
Housing Assembly, Bottom	10-862905
Cover, Battery & Fuse Compartment	5-116701
Spring, Contact	5-116685
Actuator, Pointer Lock	5-116696
Knob, Range Selector	3-260640
Label, Range Selector	5-116816
Operator's Manual	5-116868

SIMPSON ELECTRIC COMPANY

853 Dundee Avenue, Elgin, Illinois 60120 — Phone: (312) 695-1121

AUTHORIZED SERVICE CENTERS

*Authorized Parts Sales & Repair Service Only

**Authorized Parts, General Test Equipment
& Panel Instrument Sales & Service

*Same Service As (**) Above Plus
Authorized Panel Instrument Modification

Additionally Authorized for Service on Recorders,
Controllers, Digital Products and Lab Portables

* ALABAMA, MOBILE 36617

** Brownell Electro Inc.
3450 Armour Drive
Tel. (205) 479-5405

* ALASKA, ANCHORAGE 99501

Yukon Radio Supply Inc.
3222 Commercial Drive
P.O. Box 406
Tel. (907) 277-1497

* ALASKA, ANCHORAGE 99500

R.M. Zook & Associates
1710 E. 27th Avenue
Tel. (907) 272-6917

* ALASKA, FAIRBANKS 99701

Yukon Radio Supply Inc.
1112 Cushman Street
Tel. (907) 452-1011

* ARIZONA, PHOENIX 85034

** Metermaster, Inc.
 2633 E. Buckeye
Tel. (602) 273-7331

* CALIFORNIA, GLENDALE 91201

** R.V. Weatherford Company
 6921 San Fernando Road
Tel. (213) 849-3451

** CALIFORNIA, LOS ANGELES 90040

** Metermaster, Inc.
 5646 Jillson Street
Tel. (213) 685-4340

CALIFORNIA, PALO ALTO 94303

** Metermaster, Inc.
 3995 E. Bayshore Road
Tel. (415) 968-0313

* CALIFORNIA, SAN DIEGO 92123

** Metermaster/San Diego
 8797 Balboa Avenue
Tel. (714) 278-2112

** CALIFORNIA, SAN FRANCISCO 94105

** Pacific Electrical Inst.
111 Main Street
Tel. (415) 421-7185

* CALIFORNIA, SANTA CLARA 95050

** Dynametron
 3343 Edward Avenue
Tel. (408) 246-6535

** COLORADO, DENVER 80223

** Meter Master Instrument Corp.
 1165 S. Cherokee
Tel. (303) 722-5766

* CONNECTICUT, MIDDLETOWN 06457

** The Mancib Company
 Randolph Road and Coe
Tel. (203) 347-5629

* FLORIDA, FT. LAUDERDALE 33308

** A&M Instrument Inc.
4257 N.E. 6th Avenue
Tel. (305) 565-2579

FLORIDA, MIAMI 33136

** Florida Precision Instrument Co.
800 N.W. 7th Avenue
Tel. (305) 374-1731

* FLORIDA, ORLANDO 32806

** Brownell Electro Inc.
 307-27th Street Box 8945
Tel. (305) 843-6770

* GEORGIA, HAPEVILLE 30054

** Brownell Electro Inc.
 P.O. Box 82760
Tel. (404) 762-5181

HAWAII, HONOLULU 96819

** Electronic Measurement Corp.
2979 Ualena Street
Tel. (808) 847-1138

HAWAII, HONOLULU 96819

** Kems Incorporated
239 Puuhale Road
Tel. (808) 847-1395

* ILLINOIS, CHICAGO 60648

** A&M Instrument Inc.
6251 W. Touhy
Tel. (312) 774-3500

* ILLINOIS, ELK GROVE VILLAGE 60007

** Metermaster Inc.
121 Gordon Street
Tel. (312) 593-8650

* ILLINOIS, OAK PARK 60302

** Pacific Indicator Company
 6603 W. North Avenue
Tel. (312) 261-1330

** INDIANA, EVANSVILLE 47712

** Electro-Lab Services Inc.
510 Williams Road
Tel. (812) 423-5211

* KANSAS, WICHITA 67211

** Main Electronics Inc.
 225 Ida
Tel. (316) 267-3581

* LOUISIANA, HARAHAN 70123

** Industrial Instrument Works
 225 Ida
Tel. (316) 267-3581

* MARYLAND, ELKRIDGE 21227

** Sunshine Scientific Instruments Inc.
 5800 Main Street
Tel. (301) 796-5600

* MARYLAND, SAVAGE 20863

** Instrument Specialties Inc.
 Div. of Pytronic Industries
8220 Wellmoor Court
Tel. (301) 792-7000

* MARYLAND, TIMONIUM 21093

** E.L. Instruments Inc.
 1830 York Road
Tel. (301) 252-1260

* MASS., BURLINGTON 01803

** The Mancib Company
 Middlesex Turnpike at "A"
Tel. (617) 272-9450

** MICHIGAN, FERNDALE 48220

** Ram Meter Inc.
 1100 Hilton Road
Tel. (313) 547-1000

* MINN., MINNEAPOLIS 55427

** Instrumentation Services Inc.
 957 Winnetka Avenue North
Tel. (612) 544-8916

* MISSOURI, ST. LOUIS 63143

** Scherrer Instruments Inc.
 7170 Manchester
Tel. (314) 644-6382

MONTANA, BILLINGS 59102

** Indust. Electronics & Automation Co.
2442 Grand Avenue
Tel. (406) 656-1313

* NEW JERSEY, BELLEVILLE 07109

** Marshall Instruments Inc.
236 Washington Avenue
Tel. (201) 751-1190

** NEW JERSEY, SO. PLAINFIELD 07080

** Brownell Electro Inc.
500 Hadley Road
Tel. (201) 753-4600

* NEW YORK, BUFFALO 14216

** Trott Electronics Inc.
 932 Hertel Avenue
Tel. (716) 876-0880

** NEW YORK, ROCKVILLE CTR. 11571

** A&M Instrument Inc.
5 Nassau Street
Tel. (516) 678-6960

* NEW YORK, NEW YORK 10011

** Brownell-Electro Inc.
85th Tenth Avenue
Tel. (212) 924-6000

** NEW YORK, NEW YORK 10013

** Nilsson Electrical Laboratory Inc.
 103 Lafayette Street
Tel. (212) 925-1730

NEW YORK, SYRACUSE 13215

** Syracuse Instrument Lab.
4895 South Avenue
Tel. (315) 492-1651

NEW YORK, VESTAL 13850

** Compton Industries
413 Commerce Way
Tel. (607) 729-9221

* NO. CAROLINA, CHARLOTTE 28214

** Brownell-Electro Inc.
 5141 Belhaven Blvd. Box No. 16368
Tel. (704) 394-4341

** NORTH CAROLINA, RALEIGH 27603

** Douglas Instruments Inc.
605-07 West South St.
Tel. (919) 832-8536

* OHIO, CLEVELAND 44105

** Pioneer/Cleveland Inst. Lab
 Div. of Pioneer-Standard Elect. Inc.
4800 East 131st Street
Tel. (216) 687-3600

*** OHIO, CLEVELAND 44135**

** Weschier Electric Corp.
4250 West 130th Street
Tel. (216) 251-4609

**** OHIO, COLUMBUS 43219**

Contronics Inc.
2629 Johnstown Road
Tel. (614) 471-6466

*** OHIO, DAYTON 45404**

** Pioneer/Dayton Div. of
 Pioneer-Standard Elect. Inc.
1900 Troy Street
Tel. (513) 236-9900

*** OKLAHOMA, OKLAHOMA CITY 73107**

Huston Laboratories Inc.
536 No. Pennsylvania
Tel. (405) 235-5469

*** OKLAHOMA, TULSA 74120**

Agra Engineering Company
551 S. Quaker Avenue
Tel. (913) 584-4235

**** OREGON, PORTLAND 97217**

Westcon Inc.
1910 N. Killingsworth St.
Tel. (503) 285-6629

*** PA., PHILADELPHIA 19115**

** Sunshine Scientific Instruments Inc.
 1810 Grant Avenue
Tel. (215) 673-5600

**** PA., PITTSBURGH 15222**

** Cameradio Company
2801 Liberty Avenue
Tel. (412) 288-2600

*** PA., PITTSBURGH 15221**

** E.L.L. Instruments Inc.
 1844 Ardmore Blvd.
Tel. (412) 731-5230

**** TENNESSEE, MEMPHIS 38116**

** Brownell Electro Inc.
 3053 Tranquility Drive
Tel. (901) 332-9254

TENNESSEE, MEMPHIS 38104

** Instrument Repair Service
1374 Overton Park Avenue
Tel. (901) 278-0762

**** TENNESSEE, NASHVILLE 37210**

** Brownell Electro Inc.
 1050 Acorn Drive
Tel. (615) 889-8230

*** TEXAS, DALLAS 75220**

** Ultra Instrument Lab., Inc.
 9995 Monroe
Tel. (214) 357-0297

**** TEXAS, EL PASO 79901**

Border Electronics
1704 E. Paisano Drive
Tel. (915) 532-2524

**** TEXAS, GARLAND 75040**

** Metermaster Inc.
2815 National Drive
Tel. (214) 271-2471

*** TEXAS, HOUSTON 77006**

** Electrical Instrument &
Meter Co. (EIMCO)
1424 Westheimer
Tel. (713) 526-6871 & 72

**** TEXAS, ODESSA 79760**

Meter Service & Supply Company
2127 Karnit Hwy. P.O. Box 2373
Tel. (915) 332-0565

**** VIRGINIA, ALEXANDRIA 22314**

** E.L.L. Instruments Inc.
 Shirley Hwy. at Edsall Rd.
Tel. (703) 354-4330

*** VIRGINIA, RICHMOND 23229**

** Instrument Technical Reps.
 1003 Starking Drive P.O. Box 4856
Tel. (804) 288-7198

*** WASHINGTON, SEATTLE 98105**

** Eicher-Richards Company
 2727 N.E. Blakeley Street
Tel. (206) 523-7898

*** WASHINGTON, SEATTLE 98119**

** The Instrument Lab., Inc.
932 Elliott Avenue West
Tel. (206) 283-5850

**** WASHINGTON, SPOKANE 99202**

Industrial Instrument Supply Company
E. 2121 Riverside
Tel. (509) 534-9353

*** WISC., MILWAUKEE 53202**

** The Electro-Mechano Company
241 East Erie Street
Tel. (414) 272-4050

Warranty

SIMPSON ELECTRIC COMPANY warrants each instrument and other articles of equipment manufactured by it to be free from defects in material and workmanship under normal use and service, its obligation under this warranty being limited to making good at its factory any instrument or other article of equipment which shall within 90 days after delivery of such instrument or other article of equipment to the original purchaser be returned intact to it, or to one of its authorized service stations, with transportation charges prepaid, and which its examination shall disclose to its satisfaction to have been thus defective; this warranty being expressly in lieu of all other warranties expressed or implied and of all other obligations or liabilities on its part, and SIMPSON ELECTRIC COMPANY neither assumes nor authorizes any other persons to assume for it any other liability in connection with the sale of its products.

This warranty shall not apply to any instrument or other article of equipment which shall have been repaired or altered outside the SIMPSON ELECTRIC COMPANY factory or authorized service stations, nor which has been subject to misuse, negligence or accident, incorrect wiring by others, or installation or use not in accord with instructions furnished by the manufacturer.

Simpson

ELECTRIC COMPANY

3011 Pioneer Ave. Dept. 10000-0000 Phone (412) 696-1171

CANADA: 800 Simpson St. London, Ontario

IN INDIA: Rich Simpson (U.K.) Pvt. Ltd., Whitefield, Bangalore

IN INDIA: Rajmohan Simpson Private Ltd., International House, Broadway, Anna Nagar, Chennai

